

USB TV STICK USER' S MANUAL

Part One Product Instruction

Thank you for choosing this product!

The product adopts the latest digital audio-video multimedia processing chipset and high-quality TV system tuner, supports 10-bit video decode and 16-bit audio decode. The chroma is vivid. It is fully compatible with USB2.0 Hi-Speed and Plug& Play standard, easily to install and use. Using this Pen-sized analog USB stick, you can capture and record TV/Video, which makes your computer a family multi-media audio-video center. You can enjoy new digital audio-video entertainment anywhere. It is your cost-effective choice of your PC-TV entertainment on both laptop and desktop computers

1. Introduction

1.1 Feature

- ◆ Support USB2.0 and WINDOWS XP/vista.
- ◆ Real-time record and support MPEG I/II.
- ◆ Adjust the picture size and support 24-bit real color
- ◆ Capture high-quality dynamic and static picture, the dynamic picture is smooth and can reach 30 frames per minute.
- ◆ With VIDEO、S-VIDEO and multimedia interface, able to connect with camera, VCD or TV game Player.
- ◆ Support worldwide analog TV (NTSC/PAL/SECAM)
receiving

USB TV STICK USER ' S MANUAL

- ◆ Schedule TV recording and save directly to your HDD on MPEG1,MPEG2,MPEG4 formats
- ◆ Still image snapshot, save image to BMP file.
- ◆ Brightness, contrast, saturation and chroma adjustable.

1.2 Product Specification

- ◆ Window / full-screen show.
- ◆ Capture high-quality static picture and support MPEG I/II compression.
- ◆ Reach 30 frames per minute with the resolution 720x480 (NTSC DVD) , reach 25 frames per minute with the resolution 720x576 (PAL DVD).
- ◆ Support USB plug & play function.
- ◆ Support overlay show.
- ◆ Support video-background function.
- ◆ Support Windows XP/VISTA.
- ◆ Support USB2.0 (Hi-Speed) standard.

Part Two System Requirements

P4-2.8G or higher

256M memory or higher

Support display card with Windows XP SP2/VISTA32

USB TV STICK USER' S MANUAL

Directx9.0C

A vacant USB2.0 interface

Part Three Product list

When you open the packing box, please make sure whether the accessories in the packing box are as follows or not. With the missing pieces, please contact with the distributor as soon as possible.

USB TV Stick	1 piece
USB Cable	1 piece
MMI Cable	1piece
User's Manual	1 piece
Remote control	1 piece
Drivers & Application CD	1 piece

Notice: The above list is only for reference, the list is subject to change without notice.

Part Four Drivers and Applications Installation in Windows XP

4.1 Drivers installation

Notice:

1. Without special instruction, all the following USB interfaces are USB2.0 interfaces.

2. The driver installation takes Windows XP with English version

USB TV STICK USER' S MANUAL

 
as an example, but under other operating systems, it may be slightly different.

4.1.1 When you put USB TV Stick via USB cable into USB interface, the system will automatically check new hardware and then will prompt the following picture, then click “No, not this time”, click next to continue.



4.1.2 Then the following window appears, select “Install from a list or specific location (Advanced)” and “Next”, click “Next” to continue:


USB TV STICK USER' S MANUAL

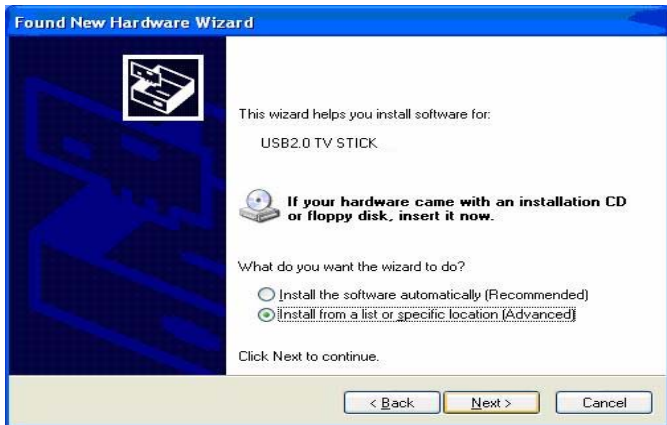

4.1.3 The wizard will prompt you to choose your installation directory.

4.1.4 Insert the Driver CD into CD-ROM (assumed to be D :\). Tick “Include this Location in the search”, then click “Browse” to find the driver in CD-ROM, as below: D:\Driver-2K&XP&VISTA

 USB TV STICK USER' S MANUAL

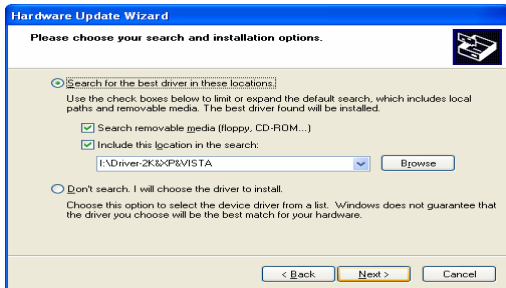

4.1.5 Click “Next” button and then the following window appears.



4.1.6 Click “Continue Anyway” button and then the following window appears.

USB TV STICK USER' S MANUAL

 


4.1.7 Installing process is as follows:



USB TV STICK USER' S MANUAL

4.1.8 Click “Finish” button and finish the driver installation.

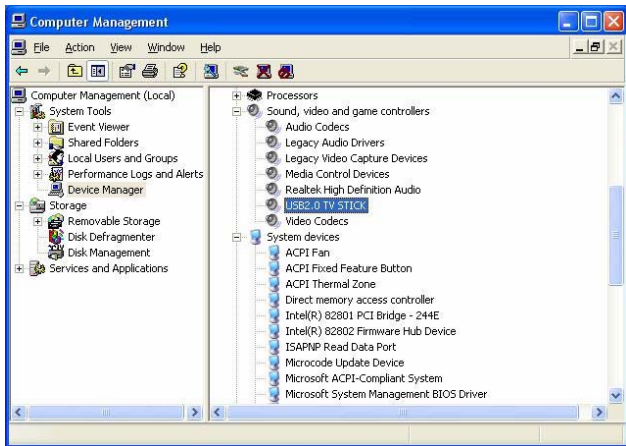

4.1.9 After the driver installation, please confirm “USB TV Stick” device on the Device Manager.

NOTE: After you finish the installation, please restart your PC!

4.2 Application installation

Notice:

 
1. Without special instruction, all the following USB interfaces are USB2.0 interface.

2. The driver installation takes Windows XP_SP2 with English version as an example, under other operating systems, it may be

USB TV STICK USER' S MANUAL


slightly different.

Open the file of SETUP.EXE in the CD, the following window will appear, select the language you need and click “NEXT”.

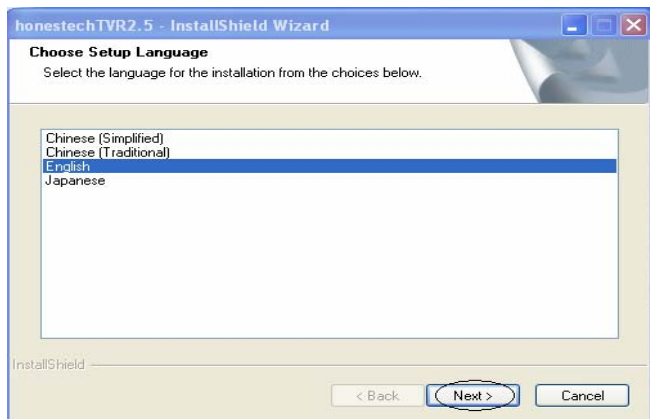


The installing process will appear,

 
USB TV STICK USER' S MANUAL

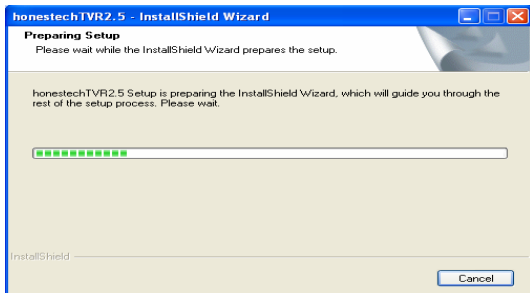

 When the following window appears, click “YES”:




Click “YES”:

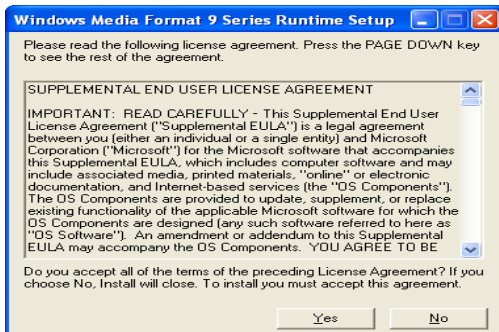 


Click “OK”:

 USB TV STICK USER' S MANUAL

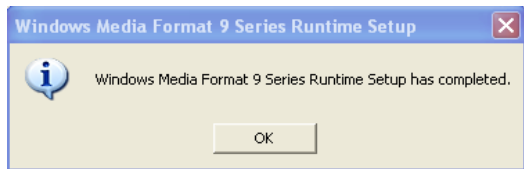


Click “NEXT”:

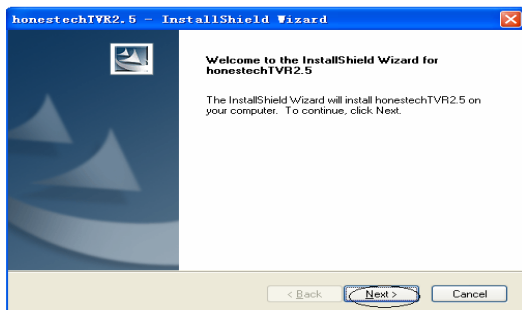 


When the following window appears, please choose “I accept the terms of the agreement”, and click “NEXT”.

 USB TV STICK USER' S MANUAL

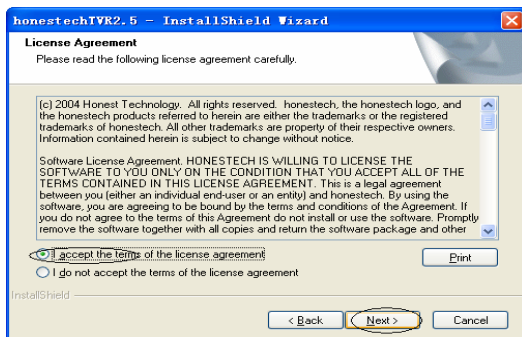


 Please choose the installation directory and click “NEXT”.

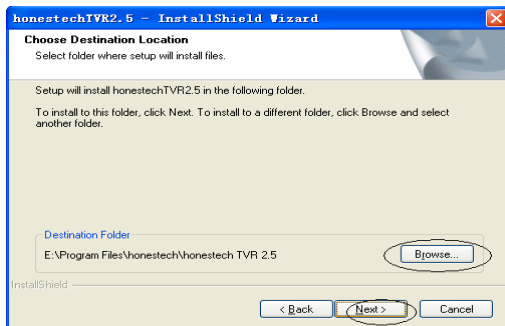

Click “NEXT”:

 
USB TV STICK USER' S MANUAL

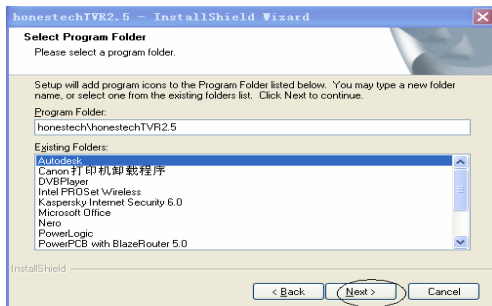

Click “YES”:




 When the following window appears, click “NEXT”:

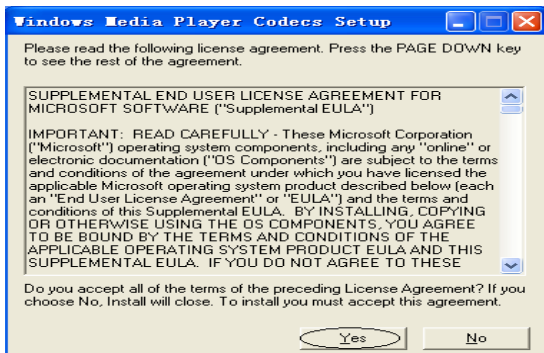


USB TV STICK USER' S MANUAL

 When the following window appears, click “NEXT”:

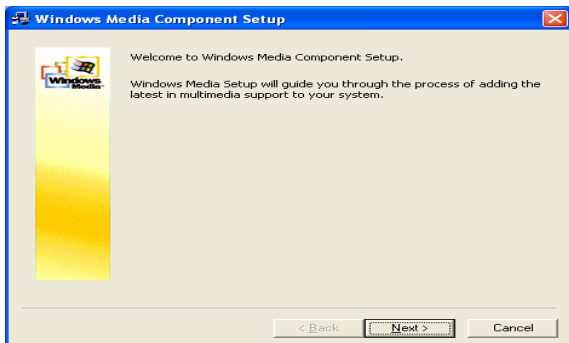


 When the following window appears, select “Reinstall all components” and click “NEXT”:

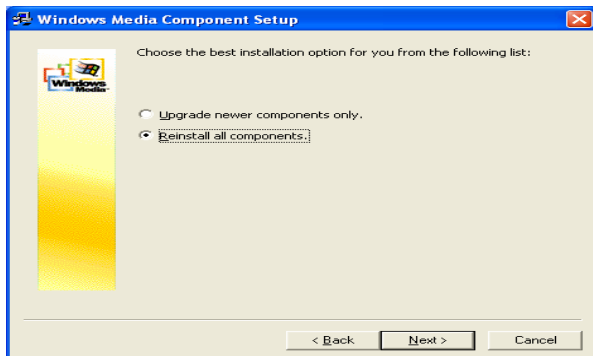


USB TV STICK USER ' S MANUAL

 When the following window appears, click “NEXT”:

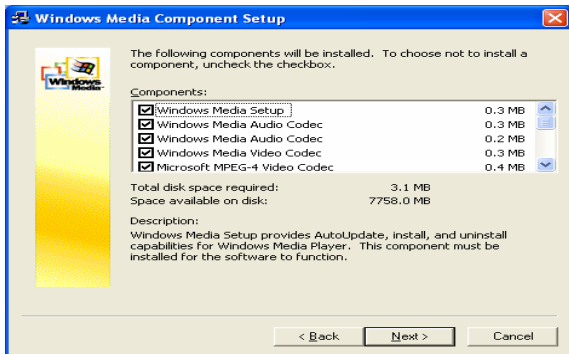


 When the following window appears, click “NEXT”:

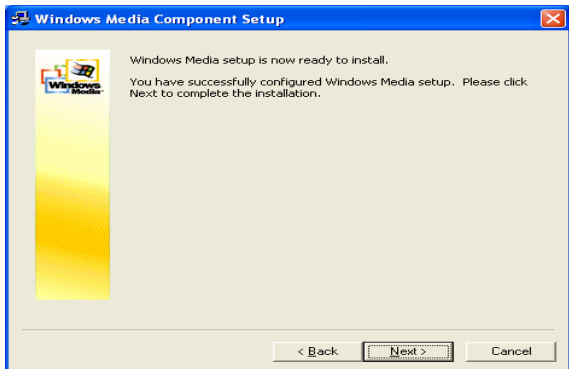


When the following window appears, click “FINISH”:

 USB TV STICK USER' S MANUAL

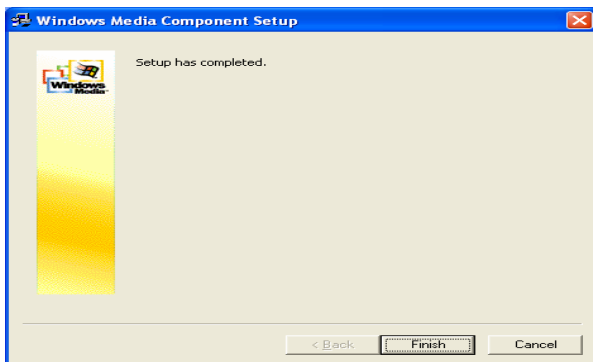


 When the following window appears, click “FINISH”:

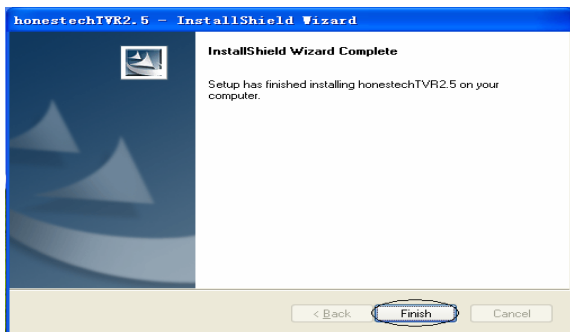

Open HonestechTVR, the following windows will appear:

 USB TV STICK USER' S MANUAL

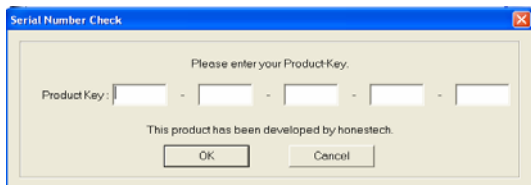

Open the file of “Product Key” in the disc as the following picture

 


Copy “KEY” to the following window, and click “OK”



Please refer to the help document of HonestechTVR for more operation details.

USB TV STICK USER' S MANUAL

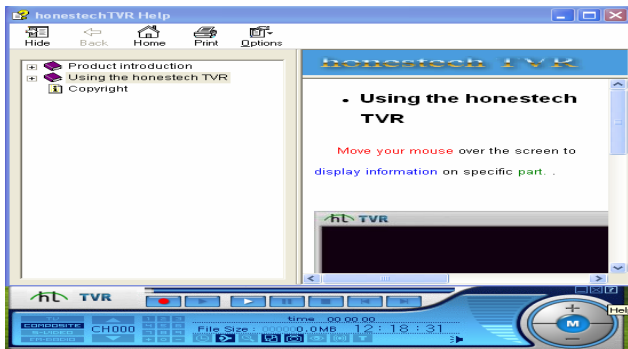

**** After you finish all the installations, please restart the PC!!***

Part Five Drives and Applications Installation in Windows Vista

5.1 Drivers installation

Notice:

1. Without special instruction, all the following USB interfaces point to USB2.0 interface.
2. The driver installation takes Windows XP with English version as an example, under other operating systems, it may be slightly different.

1 Please put the disc into the driver of computer.

USB TV STICK USER ' S MANUAL

2 When you put the USB TV Stick into USB interface via MINI USB, the PC will automatically check the new hardware ,and then the following windows will appear, and click “Locate and install driver software (RECOMMENDED)”:



3 When the following window appears, select “Do not search online”



4 When the following window appears, click “Next”

USB TV STICK USER ' S MANUAL

 


5 When the following window appears, please select “Install this driver software anyway”



6 Installing process:

USB TV STICK USER ' S MANUAL

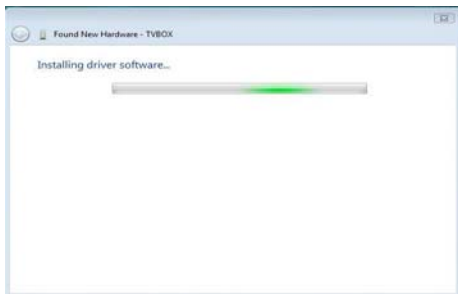

7 After finish the driver installation, please click “CLOSE”



8 After the driver installing finished, please confirm “Trident Analog Video” in the device manager, if not, please move and reset and then install it by hand.

After finished the driver installing, please restart your computer !

 
5.2 Application software installing

USB TV STICK USER ' S MANUAL

Open the file of “SETUP.EXE” under APP folder in the disc, the following window will appear, please select the language you need, and click “NEXT”;



When the following window appears, click “NEXT”:

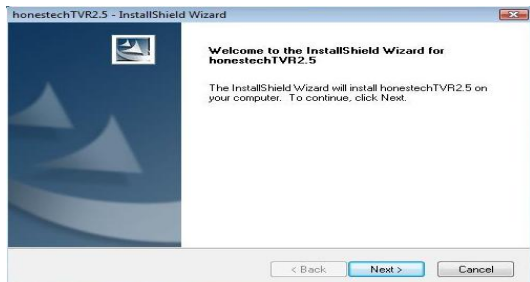


When the following window appears, select “I accept the terms of the terms of the license agreement” and click “NEXT”

USB TV STICK USER' S MANUAL




 Select the installation folder (the default install directory is system disk\Program Files\honestech\honestech tvr 2.5), click “NEXT”:

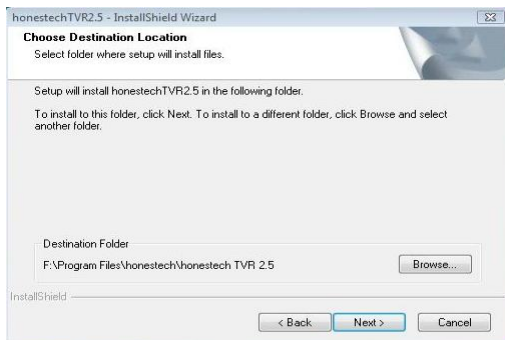


When the following window appears, click “NEXT”:

 USB TV STICK USER ' S MANUAL

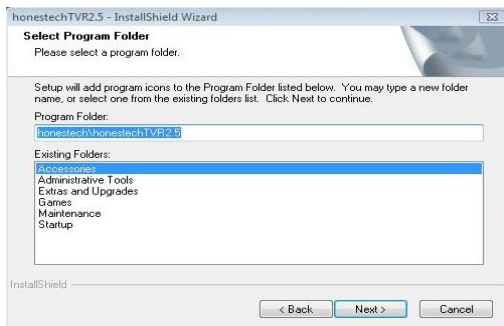

Installing process

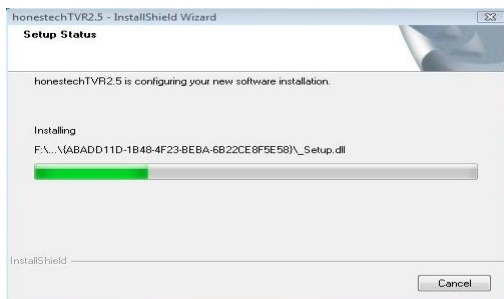 


When the following window appears, please click “YES”:



USB TV STICK USER' S MANUAL

 Appear the following windows, please click “YES”:

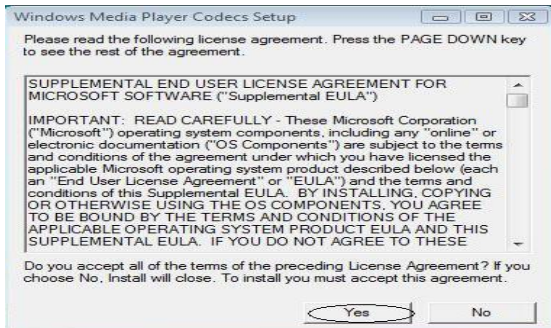

Click “FINISH”.

Open “HONESTECHTVR” on the desktop, and the following window will appear,



Open the file of “Product Key” in the disc as the following picture

USB TV STICK USER' S MANUAL

 


Copy “KEY” to the following windows as the picture, and click “OK”



Please refer to the help document of HonestechTVR for more operation details.

USB TV STICK USER' S MANUAL

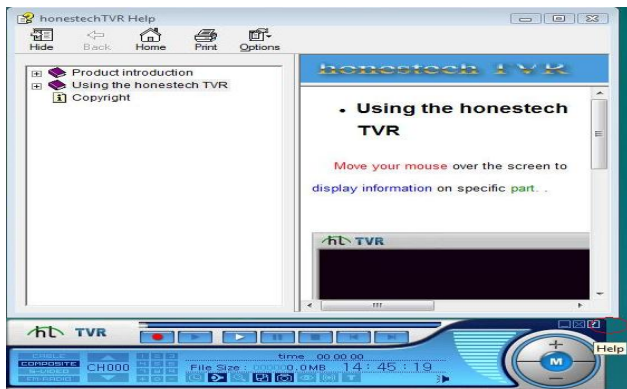

After the installation, please restart your computer!

Question to answer

Q: After I put the USB TV Stick into USB interface, the system will prompt “a high-speed USB device inserts a low-speed end”?

A: The reason why the hint appears is because USB TV Stick adopts high-speed USB2.0 interface, but your computer is not equipped with USB2.0 interface or not installed with appropriate USB2.0 interface driver. With Intel chips of main board, according to your operation system, as long as you install Windows 2000 SP4 or Windows XP SP1 patch kits, you may use it normally. With other chips of main board, you need to install the USB drive the manufacturers provide.